

# SOFT START CABINET



## DESCRIPTION

- Overload protection
- Built-in HP /LP safety
- General switch + ventilation
- On/Off function
- Remote control input
- Fault viewing
- Available for several powers:
  - 32A max
  - 47A max
  - 62A max
  - 75A max
  - 88A max
  - 110A max
  - 140A max
  - 170A max
  - 210A max

## SPECIFICATIONS

- Automatic mode start on external contact (pressure switch, level relay, etc.) or clock/timer
- Manual start-up using the push button on the front
- Several options available:
  - No flow stop
  - Unpriming
  - 24H timer
  - 24H clock
  - Time meter
  - Voltmeter
  - 40A differential switch
  - 63A differential switch
  - Heating element safety
  - Threshold ammeter

# SOFT START CABINET

## REFERENCES

### Cabinets

**CABINET WITH SOFT STARTER 15KW - 32A MAX**  
APR0001

**CABINET WITH SOFT STARTER 22KW - 47A MAX**  
APR0002

**CABINET WITH SOFT STARTER 30KW - 62A MAX**  
APR0003

**CABINET WITH SOFT STARTER 37KW - 75A MAX**  
APR0004

**CABINET WITH SOFT STARTER 45KW - 88A MAX**  
APR0005

**CABINET WITH SOFT STARTER 55KW - 110A MAX**  
APR0006

**CABINET WITH SOFT STARTER 75KW - 140A MAX**  
APR0007

**CABINET WITH SOFT STARTER 90KW - 170A MAX**  
APR0008

**CABINET WITH SOFT STARTER 110KW - 210A MAX**  
APR0009

### Options

**NO FLOW STOP OPTION**  
IRI0049

**VOLTMETER OPTION**  
IRI0054

**UNPRIMING OPTION**  
IRI0050

**40 A DIFFERENTIAL SWITCH**  
IRI0056

**24H TIMER OPTION**  
IRI0051

**63 A DIFFERENTIAL SWITCH OPTION**  
IRI0057

**24-HOUR CLOCK OPTION**  
IRI0052

**HEATING ELEMENT SAFETY OPTION**  
IRI0058

**HOUR COUNTER OPTION**  
IRI0053

**THRESHOLD AMMETER OPTION**  
IRI0067